


Body:

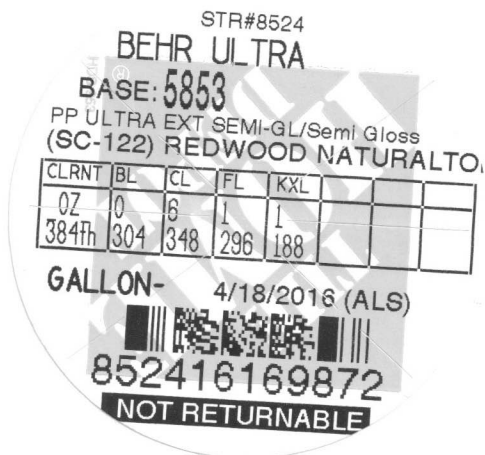

APPLICATION:

Make sure cabin is clean of dirt, spider webs etc. Usually a good wash will suffice.

Use a 4 inch roller to apply first coat. Rollers sold at Home Depot at \$4.95 a set. Use a new roller every day. Don't try to wash or save them.

Apply paint as thick as possible but not running.

After applying with roller go back periodically and use a 4 inch brush to smooth and take care of any runs.

If caulk needs to be applied make sure caulk is not going over bad caulk as it will fail. Use Polyurethane Cedar Tan color caulk. Sells at Ace for about \$8.50 a tube. DON'T use latex caulk. Best to apply paint when caulk still tacky.

Use Yellow "Frog Tape" around windows.

TRIM:

Trim is same paint but the color is "Valise"

PO Box 6411
Brookings, OR 97415
541-813-0852 • email@whiterockresort.com